FIXED STILE OPTIONS (ARCHETYPE LOCKSTILE)
SERIES 3070 MULTI-SLIDE
STRAIGHT OR 90° CORNER (ACTIVE SIDE)

FLEETWOOD WINDOWS & DOORS
FleetwoodUSA.com
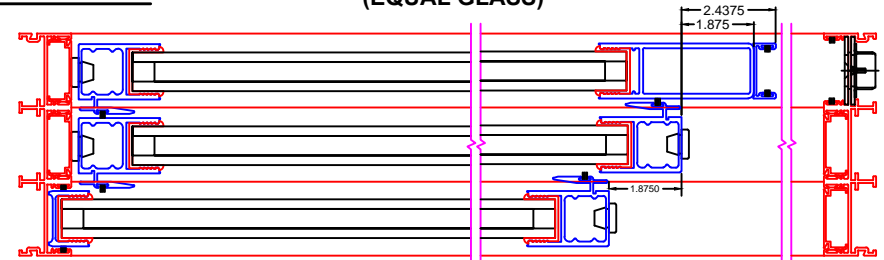
DRAWING: DATE:3/26/15

OPTIONS_FIXED_3070

NARROW STILE 3008

FLUSH STACK

(LOCKSTILE) ARCHETYPE
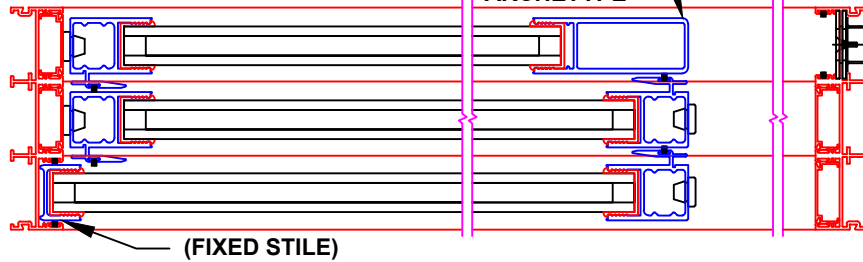
(FIXED STILE)

NON-FLUSH STACK (EQUAL GLASS)

2.4375
1.875

1.8750

ARCHETYPE NARROW 3005

FLUSH STACK

(FIXED STILE)

NON-FLUSH STACK (EQUAL GLASS)

2.4375
1.875

ARCHETYPE STILE 3767

FLUSH STACK

BUMPER

BUMPER

(FIXED STILE)

NON-FLUSH STACK (EQUAL GLASS)

2.4375
1.875
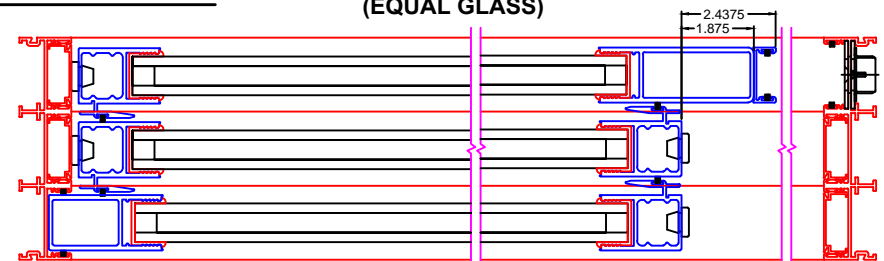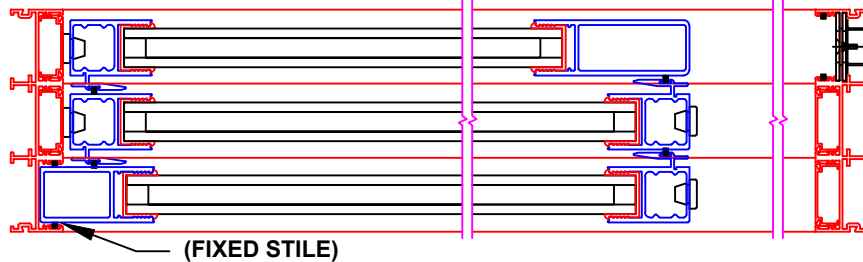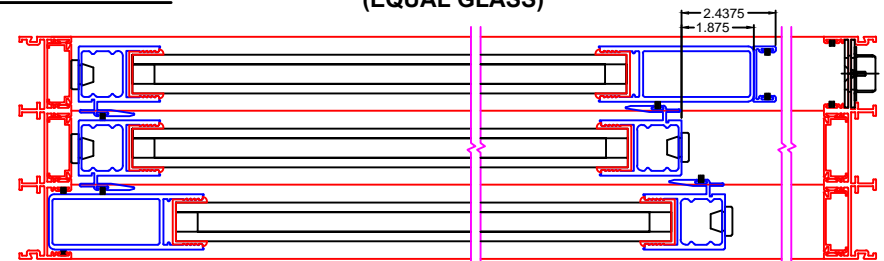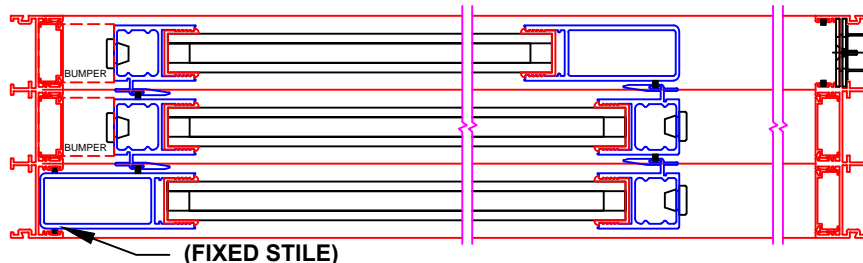
NARROW STILE 3008
1. CALCULATE EQUAL GLASS SIZES.
2. SUBTRACT 1.875 FROM LEAD GLASS (IF YOKE SUBTRACT2.437).
3. ADD 1.875 TO FIXED GLASS.
4. IF YOKE SUBTRACT 1.875 FROM 2.437 FOR ADD OF 0.562
5. THEN DIVIDE TOTAL ADD OF 0.562 BY TOTAL# PANELS
   EACH SIDE OF YOKE,
   EXAMPLE OXIXXO THEN DIVIDE 0.562 BY 2 FOR OX AND ADD
   THAT AMOUNT TO THE O AND X PANEL , THEN DIVIDE 0.562 BY
   3 FOR OXX AND ADD THAT AMOUNT TO THE O PANEL AND
   TO BOTH X PANELS.

ARCHETYPE NARROW 3005
1. CALCULATE EQUAL GLASS SIZES.
2. SUBTRACT 1.875 FROM LEAD GLASS (IF YOKE SUBTRACT2.437).
3. DIVIDE 1.875 BY TOTAL# PANELS
   ADD THAT AMOUNT TO ALL GLASS PANELS .
   IF YOKE THEN DIVIDE THE TOTAL ADD OF 2.437 BY TOTAL#
   OF PANELS EACH SIDE OF YOKE,
   EXAMPLE OXIXXO THEN DIVIDE 2.437 BY 2 FOR OX AND ADD
   THAT AMOUNT TO THE O AND X PANEL , THEN DIVIDE2.437 BY
   3 FOR OXX AND ADD THAT AMOUNT TO THE O PANEL AND
   TO BOTH X PANELS.

ARCHETYPE STILE 3767 :
1. CALCULATE EQUAL GLASS SIZES.
2. SUBTRACT 1.875 FROM LEAD GLASS (IF YOKE SUBTRACT2.437).
3. DIVIDE 1.875 BY TOTAL# PANELS,
   ADD THAT AMOUNT TO ALL GLASS PANELS .
   IF YOKE THEN DIVIDE THE TOTAL ADD OF 2.437 BY TOTAL#
   OF PANELS EACH SIDE OF YOKE,
   EXAMPLE OXIXXO THEN DIVIDE 2.437 BY 2 FOR OX AND ADD
   THAT AMOUNT TO THE O AND X PANEL , THEN DIVIDE2.437 BY
   3 FOR OXX AND ADD THAT AMOUNT TO THE O PANEL AND
   TO BOTH X PANELS.