

GREATER THAN 90° INSIDE CORNER WINDOW: BLOCK FRAMES

330-T, 350-T, 450-T, 3800-T & EDGE |f|

U:\Cadfiles_Admin\Products\Windows (9/13/23)


CUSTOMER:

ORDER NO.:


SERIES:

ITEM NO.:

PLAN VIEW
SERIES 350-T SHOWN

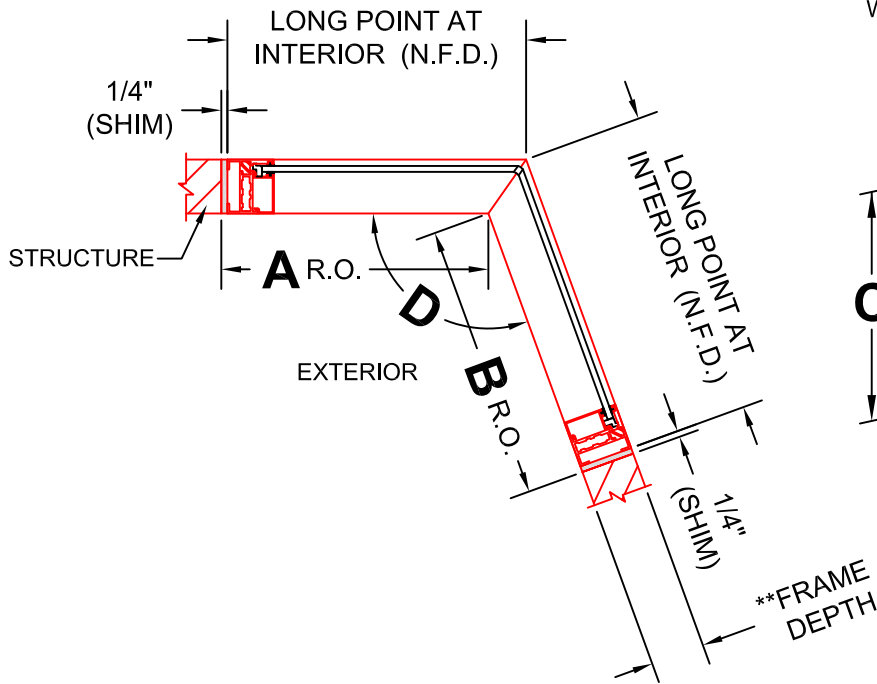

ISOMETRIC VIEW
GREATER THAN 90°
INSIDE CORNER STRUCTURE

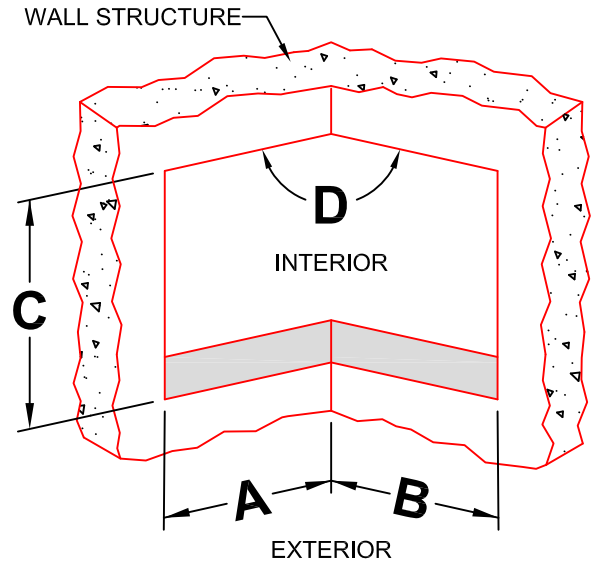

CUSTOMER TO FILL IN

D ANGLE: _____

NOTES:

- 1) *SERIES ADD (A, B) ON LARGER ANGLES MAY BE A NEGATIVE NUMBER.
- 2) †IMPORTANT: 450-T SHIM SPACE VARIES PER WINDOW TYPE - (FIXED OUTSIDE GLAZED = .25"); (FIXED INSIDE GLAZED, P.O. w/BUTT HINGE, AND P.I. = .50"); (P.O. w/4-BAR HINGE = .625"). NOTE: 2X FOR DIM. REF. C

INSTRUCTIONS: ENTER THE (3) R.O. DIMENSIONS AND (1) ANGLE IN THE TABLES. ENTER BUILDING EXTERIOR DIMENSIONS ONLY!

♦SEE FORMULA BELOW
TO CALCULATE
*SERIES ADD

CUSTOMER TO FILL IN			FLEETWOOD TO FILL IN		
DIM. REF.	CUSTOMER R.O.		*SERIES ADD (A, B) & SHIM DEDUCT (C)		LONG POINT (INT.) N.F.D.
A		+	*	=	
B		+	*	=	
C		-	.50 [†]	=	

SERIES	**FRAME DEPTH
330-T	3.375
350-T	2.25
450-T [†]	3.00
3800-T	4.50
EGDE f	2.50 (NO SHELF)

➔ *SERIES ADD = $\tan[90-D/2](**\text{FRAME DEPTH})-(\text{SHIM}^\dagger)$

CUSTOMER SIGNATURE:

DATE: