

LESS THAN 90 DEGREE INSIDE CORNER DIMENSIONAL LAYOUT_NAIL-FIN FRAMES

330-T, 350-T, 450-T & 3800-T

U:\Cadfiles_Admin\Products\Windows (9/13/23)


CUSTOMER:

ORDER NO.:


SERIES:

ITEM NO.:

PLAN VIEW
 SERIES 350-T SHOWN

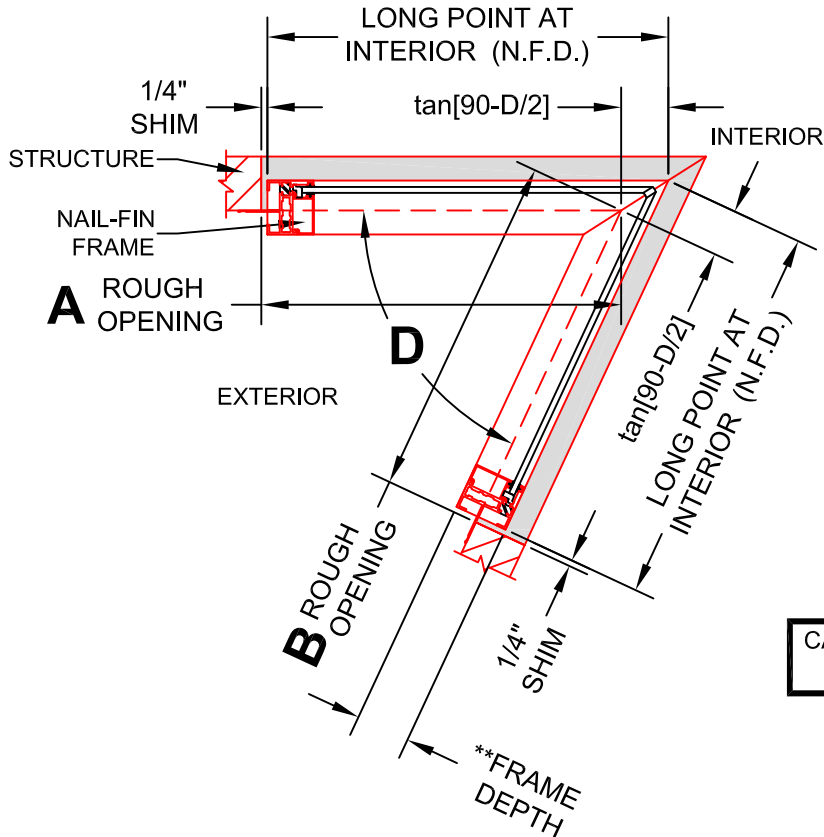

ISOMETRIC VIEW
 LESS THAN 90°
 INSIDE CORNER STRUCTURE

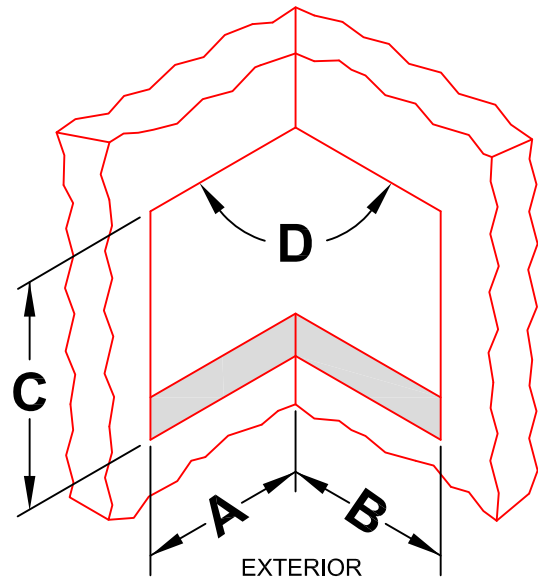

CAUTION: INSTALLATION OF NAIL-FIN INSIDE CORNER WINDOWS REQUIRES FURRING AT JAMBS!!!

CUSTOMER TO FILL IN

D ANGLE: _____

NOTE:

†IMPORTANT: 450-T SHIM SPACE VARIES PER WINDOW TYPE - (FIXED OUTSIDE GLAZED = .25"); (FIXED INSIDE GLAZED, P.O. w/BUTT HINGE, AND P.I. = .50"); (P.O. w/4-BAR HINGE = .625"). NOTE: 2X FOR DIM. REF. C

INSTRUCTIONS: ENTER THE (3) R.O. DIMENSIONS AND (1) ANGLE IN THE TABLES. ENTER BUILDING EXTERIOR DIMENSIONS ONLY!

➤SEE FORMULA BELOW TO CALCULATE
 *SERIES ADD

CUSTOMER TO FILL IN			FLEETWOOD TO FILL IN			SERIES	**FRAME DEPTH
DIM. REF.	CUSTOMER R.O.		*SERIES ADD (A, B) & SHIM DEDUCT (C)		LONG POINT (INT.) N.F.D.		
A		+	*	=		330-T	3.375
B		+	*	=		350-T	2.25
C		-	.50 [†]	=		450-T [†]	3.00
						3800-T	4.50

➤*SERIES ADD = $\tan[90-D/2](**\text{FRAME DEPTH}-1)-\text{SHIM}^{\dagger}$

CUSTOMER SIGNATURE:

DATE: